

 





 



















 



















 



 

 













 







Original		Rechange		Original		Rechange	
	Power		Power		P-		CH- / Page-
	1		1		Source		AV / Input / RDS
	2		2		Menu		Menu / Home
	3		3		TV		TV/Radio /
	4		4		Info/[=?]		Info / Angle
	5		5		Exit		Exit / Cancel / Clear
	6		6		Up		Up
	7		7		Down		Down
	8		8		Right		Right
	9		9		Left		Left
	0		0		Enter		OK
	-/--/[=+]		Guide / EPG / -/--		TTX/MIX		Text / Goto
	PRE-CH		Back / Return		Dual I-II/[=0]		Audio / Lang I/II
	Mute		Mute / Dimmer		Sleep/[=◇]		Smart / List
	Vol+		Vol+		[=◇]		Picture / Format
	Vol-		Vol-		Red		Red / Netflix / Search
	P+		CH+ / Page+		Green		Green / APP / Repeat





Original	Recharge	Original	Recharge
 Yellow/S.Mode	 Yellow / YouTube / Repeat		
 Blue/-[/-	 Blue / Prime Video / Random		

