 







 



 



 



 



 



 



 



 



 



 



 



 

 

 

 



 





 




Original		Rechange		Original		Rechange	
	Power		Power		Vol-		Vol-
	TV		TV/Radio /		PR+		CH+ / Page+
	1		1		PR-		CH- / Page-
	2		2		CH-List		Display / Media
	3		3		Menu		Menu / Home
	4		4		FAV-CH		Fav / Marker / PC
	5		5		Tools		Setup / OPT /
	6		6		Info		Info / Angle
	7		7		Return		Shift + Back / Return
	8		8		Exit		Exit / Cancel / Clear
	9		9		Up		Up
	0		0		Down		Down
	Alarm		Smart / List		Left		Left
	Pre-CH		Back / Return		Right		Right
	Mute		Mute / Dimmer		Enter		OK
	Source		AV / Input / RDS		Red		Red / Netflix / Search
	Vol+		Vol+		Green		Green / APP / Repeat





	Original	Recharge	Original	Recharge
	Yellow	 Yellow / YouTube / Repeat		
	Blue	 Blue / Prime Video / Random		
	TXT/MIX	 Text / Goto		
	SRS	 Picture / Format		
	P.Size	 Zoom / Size		
	Dual/I/II	 Audio / Lang I/II		
	Guide	 Guide / EPG / -/--		
	SUBT.	 Subtitle / EQ		
	<<	 << / Tune-		
	Pause	 Pause / Step / Freeze		
	>>	 >> / Tune+		
	Rec	 Rec / Rec Mode		
	Play	 Play / Slow		
	Stop	 Stop / Hold		

