 



 









 

 





 

 









 



 













 








 
 
 




Original	Recharge	Original	Recharge
 Power	 Power	 Display Mode	 Display / Media
 Sleep	 Sleep / Timer	 PTY/EON	 Setup / OPT /
 AUX	 Shift + 7	 Select-	 CH- / Page-
 1	 1	 Select+	 CH+ / Page+
 2	 2	 FM/AM	 AV / Input / RDS
 3	 3	 Play Tape	 OK
 4	 4	 Tape A-B	 Yellow / YouTube / Repeat
 5	 5	 Fade Muting	 Mute / Dimmer
 6	 6	 CD Play/Pause	 Play / Slow
 7	 7	 Skip Disc	 Eject / Surround
 8	 8	 Vol+	 Vol+
 9	 9	 Vol-	 Vol-
 10	 0	 TUNE- <<< / <<<	 <<< / Tune-
 +10	 Guide / EPG / -/-	 TUNE+ >>> / >>>	 >>> / Preset+
 FM Mode	 TV/Radio /	 Stop	 Stop / Hold
 Subwoofer	 Subtitle / EQ		
 Sound Mode	 Sound / Title		

