



Original		Recharge		Original		Recharge	
	Power		Power		Open/Close		Eject / Surround
	Power Tv		Shift + Power		Status		TV/Radio /
	AV Input Tv		AV / Input / RDS		PIP		Zoom / Size
	Vol+ Tv		Vol+		Internet		Smart / List
	Vol- Tv		Vol-		<< Search		<< / Tune-
	1		1		Play		Play / Slow
	2		2		Search >>		>> / Tune+
	3		3		I<< Skip		I<< / Preset-
	4		4		Pause		Pause / Step / Freeze
	5		5		Skip >>I		>>I / Preset+
	6		6		Stop		Stop / Hold
	7		7		Pop Up Menu		Menu / Home
	8		8		EXit		Exit / Cancel / Clear
	9		9		Option		Setup / OPT /
	0		0		Return		Back / Return
	Cancel		Shift + Exit / Cancel / Clear		Top Menu		D.Menu / Top
	Audio		Audio / Lang I/II		Netflix		Shift + Red / Netflix / Search



