





 



 









 























 





 



Original	Rechange
 Power	 Power
 Source	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 TTX/MIX	 Text / Goto
 PRE-CH	 Fav / Marker / PC
 Mute	 Mute / Dimmer
 CH LIST	 Smart / List
 Vol+	 Vol+

Original	Rechange
 Vol-	 Vol-
 Ch+	 CH+ / Page+
 Ch-	 CH- / Page-
 Settings	 Setup / OPT /
 Home	 Menu / Home
 Guide	 Guide / EPG / -/-
 Info	 Info / Angle
 E-Manual	 D.Menu / Top
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right
 Enter	 OK
 Return	 Back / Return
 Exit	 Exit / Cancel / Clear
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat





Original	Recharge
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Pic Size	 Zoom / Size
 Picture	 Picture / Format
 Ad/Subt.	 Subtitle / EQ
 Stop	 Stop / Hold
 <</ <<	 << / Tune-
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 >>/>>	 >> / Tune+

Original	Recharge

