





 




 



 
 







 





















 
 


 
 




















Original	Rechange	Original	Rechange
 Power	 Power	 CH-	 CH- / Page-
 1	 1	 Exit	 Exit / Cancel / Clear
 2	 2	 Red	 Red / Netflix / Search
 3	 3	 Green	 Green / APP / Repeat
 4	 4	 Yellow	 Yellow / YouTube / Repeat
 5	 5	 Blue	 Blue / Prime Video / Random
 6	 6	 Up	 Up
 7	 7	 Down	 Down
 8	 8	 Left	 Left
 9	 9	 Right	 Right
 0	 0	 OK	 OK
 Text	 Text / Goto	 Menu	 Menu / Home
 Back	 Back / Return	 APP	 Shift + Green / APP /
 Mute	 Mute / Dimmer	 List	 Smart / List
 Vol+	 Vol+	 i	 Info / Angle
 Vol-	 Vol-	 EPG	 Guide / EPG / -/-
 CH+	 CH+ / Page+	 ALT	 Audio / Lang I/II



