

 



 















 































 

















| Original | Recharge | Original | Recharge |
|--|--|--|---|
|  Off/On |  Power |  Cancel |  Exit / Cancel / Clear |
|  Sleep |  Sleep / Timer |  Random |  Blue / Prime Video / Random |
|  Display |  Display / Media |  Repeat |  Green / APP / Repeat |
|  FM Mode |  AV / Input / RDS |  CD |  Shift + 3 |
|  Tuner / Band |  Shift + 6 |  CD Pause |  Pause / Step / Freeze |
|  1 |  1 |  CD I<<</>>> |  << / Tune- |
|  2 |  2 |  CD I<<</>>> |  I<<< / Preset- |
|  3 |  3 |  CD >>>/<<< |  >> / Tune+ |
|  4 |  4 |  CD >>>/<<< |  >>I / Preset+ |
|  5 |  5 |  CD Play |  Play / Slow |
|  6 |  6 |  CD Stop |  Stop / Hold |
|  7 |  7 |  TAPE Reverse |  Menu / Home |
|  8 |  8 |  TAPE Counter |  Info / Angle |
|  9 |  9 |  TAPE Deck 1/2 |  Smart / List |
|  10/0 |  0 |  TAPE Rec Pause |  Shift + Rec / Rec Mode |
|  +10 |  Guide / EPG / -/-- |  TAPE << |  Down |
|  Program |  TV/Radio / |  TAPE << |  Shift + << / Tune- |





| Original | Recharge | Original | Recharge |
|----------------|-------------------|----------|----------|
| TAPE >> | Up | | |
| TAPE >> | + Shift + >> / | | |
| TAPE Stop | OK | | |
| TAPE Stop | + Shift + Stop / | | |
| TAPE Rev. Play | Left | | |
| TAPE Play | Right | | |
| TAPE Play | + Shift + Play / | | |
| Volume- | Vol- | | |
| Volume+ | Vol+ | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

