 



 











































 





 






Original	Rechange
 Power	 Power
 Eco	 Fav / Marker / PC
 Net	 Display / Media
 Net Radio 1	 1
 Net Radio 2	 2
 Net Radio 3	 3
 HDMI1	 4
 HDMI2	 5
 Bluetooth	 Shift + 9
 HDMI3	 7
 HDMI4	 8
 Optical	 9
 TV	 TV/Radio /
 AUX1	 Guide / EPG / -/-
 AUX2	 0
 System Memory	 Shift + 1
 System Memory	 Shift + 2

Original	Rechange
 System Memory	 Shift + 3
 Sub+	 CH+ / Page+
 Sub-	 CH- / Page-
 Dialog Lift	 Smart / List
 Vol+	 Vol+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 Setup	 Setup / OPT /
 Option	 Shift + Setup / OPT / Tools
 Return	 Back / Return
 Info	 Info / Angle
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 OK
 Movie	 Red / Netflix / Search



