 



 



















 

 

 




 








Original	Rechange	Original	Rechange
 Power	 Power	 Rakuten Tv	 Yellow / YouTube / Repeat
 123	 1		
 Colors	 Green / APP / Repeat		
 Up	 Up		
 Down	 Down		
 Left	 Left		
 Right	 Right		
 Ok	 OK		
 Back	 Back / Return		
 Home	 Menu / Home		
 Play/Pause	 Play / Slow		
 Vol+	 Vol+		
 Vol-	 Vol-		
 CH+	 CH+ / Page+		
 CH-	 CH- / Page-		
 Netflix	 Red / Netflix / Search		
 Prime video	 Blue / Prime Video / Random		

Original	Rechange
 Rakuten Tv	 Yellow / YouTube / Repeat

