

 



 













 

 

 















 
 


 





 



 

















Original		Rechange		Original		Rechange	
	Power		Power		Vol+		Vol+
	Mute		Mute / Dimmer		MTS I/II		Audio / Lang I/II
	1		1		CH+		CH+ / Page+
	2		2		Vol-		Vol-
	3		3		Sub-T		Subtitle / EQ
	4		4		CH-		CH- / Page-
	5		5		Aspect		Zoom / Size
	6		6		Freeze		Shift + Pause / Step /
	7		7		Sleep		Sleep / Timer
	8		8		Source		AV / Input / RDS
	9		9		Up		Up
	-/--		Shift + Guide / EPG / -/--		Display		Display / Media
	0		0		Left		Left
	Recall		Back / Return		OK		OK
	P.Mode		Picture / Format		Right		Right
	S.Mode		Sound / Title		Menu		Menu / Home
	FAV		Fav / Marker / PC		Down		Down





Original	Recharge	Original	Recharge
EXIT	Exit	CLEAR EXIT CANCEL	Exit / Cancel / Clear
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
TEXT/CC	<< / Text/CC		<< / Tune-
TEXT/CC	<< / Text/CC		Text / Goto
SUB.PG	Play/Pause /		Pause / Step / Freeze
SUB.PG	Play/Pause /		Play / Slow
REVEAL	>> / Reveal		>> / Tune+
HOLD	<< / Hold		<< / Preset-
SIZE	>> / Size		>> / Preset+
INDEX	Stop / Index		Stop / Hold
ROOT	Root		Setup / OPT /
REPEAT	Repeat	SHIFT +	Shift + Green / APP /
LIST	List		Smart / List
T.SHIFT	T.Shift		D.Menu / Top

