











Original	Rechange
Standby	Power
Mute	Mute / Dimmer
Up	Up
Left	Left
OK	OK
Right	Right
Down	Down
Menu	Menu / Home
Exit	Exit / Cancel / Clear
Red / UHF	Red / Netflix / Search
Green / Audio	Green / APP / Repeat
Green / Audio	Audio / Lang I/II
Yellow / Pause	Yellow / YouTube / Repeat
Yellow / Pause	Pause / Step / Freeze
Blue / Recall	Blue / Prime Video / Random
Blue / Recall	Back / Return
1	1

Original	Rechange
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
EPG	Guide / EPG / -/-
Group	Smart / List
Vol+	Vol+
Vol-	Vol-
CH+	CH+ / Page+
CH-	CH- / Page-
Page+	Shift + CH+ /
Page-	Shift + CH- /

Page-





Original	Rechange	Original	Rechange
 Info	 Info / Angle		
 STB / TV	 AV / Input / RDS		
 Text	 Text / Goto		
 SUBT	 Subtitle / EQ		

Original	Rechange

