

 





 










 






 




















 
 







 















Original	Rechange	Original	Rechange
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Lang		Audio / Lang I/II
	[=].		Subtitle / EQ
	Mute		Mute / Dimmer
	Home		Shift + Menu / Menu
	Smart		Smart / List
	Vol+		Vol+
	Vol-		Vol-
	P+		CH+ / Page+
	P-		CH- / Page-
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		OK
	[G]		Guide / EPG / -/--
	i		Info / Angle
	←		Back / Return
	Exit		Exit / Cancel / Clear
	Menu		Menu / Home
	Source		AV / Input / RDS
	Text		Text / Goto
	<<		<< / Tune-
	Stop		Stop / Hold



