





































Original	Rechange
 Standby	 Power
 USB/Card	 Shift + 8
 Open/Close	 Eject / Surround
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Search	 Red / Netflix / Search
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Clear	 Exit / Cancel / Clear
 0/10	 0

Original	Rechange
 Menu	 Menu / Home
 Setup	 Setup / OPT /
 Display	 Display / Media
 Title	 Sound / Title
 Left	 Left
 Up	 Up
 Right	 Right
 Enter	 OK
 Down	 Down
 <<	 << / Tune-
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Step	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Play/Pause	 Play / Slow
 Vol+	 Vol+





Original	Recharge
REPEAT Repeat	APP Green / APP / Repeat
A-B A-B	YouTube Yellow / YouTube / Repeat
ANGLE Angle	ANGLE INFO Info / Angle
MUTE Mute	DIMMER MUTE Mute / Dimmer
Vol- Vol-	VOL Vol-
L/R L/R	RDS AV INPUT AV / Input / RDS
N/P N/P	GOTO TEXT Text / Goto
PBC PBC	LIST SMART Smart / List
Slow Slow	SHIFT + SLOW Shift + Play /
V-Mode V-Mode	TOP MENU D.MENU D.Menu / Top
Return Return	RETURN BACK Back / Return
HD/Res. HD/Res.	FORMAT PICTURE Picture / Format
Program Program	PROGRAM TV/RADIO TV/Radio /
Zoom Zoom	SIZE ZOOM Zoom / Size

Original	Recharge

