



Original	Rechange	Original	Rechange
 Power	 Power	 Clear	 Exit / Cancel / Clear
 Open/Close	 Eject / Surround	 2nd Audio	 Mute / Dimmer
 Enter	 OK	 Stop	 Stop / Hold
 Up	 Up	 Search	 Shift + Red / Netflix / Search
 Down	 Down	 Pause	 Pause / Step / Freeze
 Right	 Right	 Play	 Play / Slow
 Left	 Left	 <<	 << / Tune-
 Audio	 Audio / Lang I/II	 >>	 >> / Tune+
 Subtitle	 Subtitle / EQ	 I<<	 I<< / Preset-
 PIP	 Zoom / Size	 >>I	 >>I / Preset+
 Top Menu	 D.Menu / Top	 Green/Program	 Green / APP / Repeat
 Pop-Up/Menu	 Menu / Home	 Red/Zoom	 Red / Netflix / Search
 Return	 Back / Return	 Yellow/Shuffle	 Yellow / YouTube / Repeat
 Home	 Shift + Menu /	 Blue/Repeat	 Blue / Prime Video / Random
 Miracast	 Smart / List	 1	 1
 On Screen	 Display / Media	 2	 2
 Status	 Setup / OPT /	 3	 3



