









Original		Recharge		Original		Recharge	
	Power		Power		Exit		Exit / Cancel / Clear
	1		1		Menu		Menu / Home
	2		2		EPG		Guide / EPG / -/--
	3		3		ALT		Display / Media
	4		4		SUB		Subtitle / EQ
	5		5		Browse		AV / Input / RDS
	6		6		Freeze		Pause / Step / Freeze
	7		7		Up/CH+		Up
	8		8		Down/CH-		Down
	9		9		Vol-		Vol-
	0		0		Left		Left
	Text		Text / Goto		Vol+		Vol+
	[i]		Info / Angle		Right		Right
	Tv/Rad		TV/Radio /		OK		OK
	TV		Smart / List		Page+		CH+ / Page+
	Mute		Mute / Dimmer		Page-		CH- / Page-
	Audio		Audio / Lang I/II		Red		Red / Netflix / Search





Original	Recharge
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random

Original	Recharge

