 















 

 



 



 

 




 



 

 

 
 

 

 


Original	Rechange
 Power	 Power
 Source	 AV / Input / RDS
 [=]	 Text / Goto
 I-II	 Audio / Lang I/II
 [...]	 Subtitle / EQ
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Menu	 Menu / Home
 EPG	 Guide / EPG / -/--
 Up	 Up
 <<	 << / Tune-
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 >>	 >> / Tune+
 Down	 Down

Original	Rechange
 Option	 Shift + Setup / OPT / Tools
 [i+]	 Info / Angle
 Vol+	 Vol+
 Stop	 Stop / Hold
 Page+	 CH+ / Page+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 Page-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 FAV	 Fav / Marker / PC
 4	 4
 5	 5
 6	 6
 J/Slideshow	 TV/Radio /
 7	 7





Original	Rechange	Original	Rechange
 8	 8		
 9	 9		
 Rotate	 Display / Media		
 Setup	 Setup / OPT /		
 0	 0		
 [<>]	 Picture / Format		
 Zoom	 Zoom / Size		

