







 

 
 






 



 




 







 

Original	Rechange
 STANDBY/ON	 Power
 OPEN/CLOSE	 Eject / Surround
 SETUP	 Setup / OPT /
 MUTE	 Mute / Dimmer
 REPEAT	 Green / APP / Repeat
 A-B	 Yellow / YouTube / Repeat
 SHUFFLE	 Blue / Prime Video / Random
 SLEEP	 Sleep / Timer
 DISPLAY	 Display / Media
 TOP	 Back / Return
 MENU/PBC	 Menu / Home
 SUBTITLE	 Subtitle / EQ
 AUDIO	 Audio / Lang I/II
 ZOOM	 Zoom / Size
 ANGLE	 Info / Angle
 Up	 Up
 Down	 Down

Original	Rechange
 Left	 Left
 Right	 Right
 ENTER	 OK
 I> SLOW/PROG	 Shift + >>I / Preset+
 PLAY	 Play / Slow
 PAUSE	 Pause / Step / Freeze
 STOP	 Stop / Hold
 I<< PRESET	 I<< / Preset-
 >>I PRESET	 >>I / Preset+
 << TUNNING	 << / Tune-
 >> TUNNING	 >> / Tune+
 TIMER	 Shift + Sleep / Timer
 SOURCE	 AV / Input / RDS
 CM SKIP	 Shift + Display / Media
 STEP	 Shift + Pause / Step /
 1	 1
 2	 2





Original	Recharge	Original	Recharge
 3	 3	 CH+	 CH+ / Page+
 4	 4	 VOL-	 Vol-
 5	 5	 VOL+	 Vol+
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 0	 0		
 SEARCH	 Red / Netflix / Search		
 SURROUND	 Shift + Eject / Surround		
 CLEAR	 Exit / Cancel / Clear		
 EDIT	 Text / Goto		
 SELECT	 Shift + OK		
 EQ	 Shift + Subtitle / EQ		
 RECORD	 Rec / Rec Mode		
 REC MODE	 Shift + Rec / Rec Mode		
 CH-	 CH- / Page-		

Original	Recharge	Original	Recharge
 CH+	 CH+ / Page+		
 VOL-	 Vol-		
 VOL+	 Vol+		

