





 
















Original	Rechange
 Power	 Power
 Mute	 Mute / Dimmer
 CD/SD/USB	 Shift + 3
 AUX/BT	 AV / Input / RDS
 Radio	 TV/Radio /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Display	 Display / Media
 */Menu	 Menu / Home

Original	Rechange
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right
 OK/Play/Pause	 OK
 Vol-	 Vol-
 Vol+	 Vol+
 Sound/DSC	 Sound / Title
 Recall	 Back / Return
 X/Int	 >>  / Preset+
 Stop/Stereo	 Stop / Hold
 Timer/Prog	 Shift + TV/Radio / Program
 Timer	 Shift + Sleep / Timer
 WEC/NAP	 Smart / List
 S/Sleep	 Sleep / Timer

