



Original		Rechange		Original		Rechange	
	Power		Power		Jump		Smart / List
	S.Mode		Sound / Title		.		Display / Media
	MTS		Text / Goto		Mute		Mute / Dimmer
	P.Mode		Picture / Format		Input		AV / Input / RDS
	Caption		Subtitle / EQ		Vol+		Vol+
	Sleep		Sleep / Timer		Vol-		Vol-
	P.Size		Zoom / Size		CH+		CH+ / Page+
	1		1		CH-		CH- / Page-
	2		2		Guide		Guide / EPG / -/-
	3		3		Exit		Exit / Cancel / Clear
	4		4		Up		Up
	5		5		Down		Down
	6		6		Down		Shift + Down
	7		7		Left		Left
	8		8		OK		OK
	9		9		Info		Info / Angle
	0		0		Menu		Menu / Home





Original	Recharge	Original	Recharge
	Red 		Red / Netflix / Search
	Green 		Green / APP / Repeat
	Yellow 		Yellow / YouTube / Repeat
	Blue 		Blue / Prime Video / Random
	LIST 		Shift + Smart / List
	FAV.CH 		Fav / Marker / PC
	TIMER 		Shift + Sleep / Timer
	FREEZE 		Pause / Step / Freeze

