







 







 
 

 







 

 







Original	Rechange
 Standby	 Power
 TV/VCR	 Smart / List
 TXT	 Text / Goto
 Mute	 Mute / Dimmer
 Vol+	 Vol+
 Vol-	 Vol-
 Info	 Info / Angle
 EPG	 Guide / EPG / -/-
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 Source	 AV / Input / RDS
 Tv/Rad	 TV/Radio /
 Up	 Up
 CH+	 CH+ / Page+

Original	Rechange
 Down	 Down
 CH-	 CH- / Page-
 Left/FAV-	 Left
 Right/FAV+	 Right
 Enter	 OK
 ←	 Back / Return
 HH:MM	 Zoom / Size
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0



