





 

 







Original		Rechange		Original		Rechange	
	Standby		Power		Subtitle		Subtitle / EQ
	Open/Close		Eject / Surround		Setup		Setup / OPT /
	1		1		Up		Up
	2		2		Zoom		Zoom / Size
	3		3		Left		Left
	OSD		Display / Media		OK		OK
	4		4		Right		Right
	5		5		Title		Sound / Title
	6		6		Down		Down
	Audio		Audio / Lang I/II		Menu		Menu / Home
	7		7		L/R		CH+ / Page+
	8		8		Play		Play / Slow
	9		9		Pause		Pause / Step / Freeze
	Angle		Info / Angle		Vol+		Vol+
	10/0		0		Stop		Stop / Hold
	10+		Guide / EPG / -/-		Mute		Mute / Dimmer
	Goto		Text / Goto		N/P		CH- / Page-





Original	Recharge	Original	Recharge
Step	+ Shift + Pause / Step /		
Slow	+ Shift + Play /		
Vol-	Vol-		
Repeat	Green / APP / Repeat		
A-B	Yellow / YouTube / Repeat		
Prog	TV/Radio /		
Return	Back / Return		
<<<	<<< / Tune-		
>>>	>>> / Tune+		
Clear	Exit / Cancel / Clear		
DVD/USB	AV / Input / RDS		
I<<<	I<<< / Preset-		
>>>I	>>>I / Preset+		
HDMI	Smart / List		
PBC	Picture / Format		

Original	Recharge

