



Original	Recharge
Power	Power
Guide	Guide / EPG / -/--
Input Tv	TV/Radio /
Input AV	AV / Input / RDS
Menu	Menu / Home
Text	Text / Goto
STTL/AD	Subtitle / EQ
Aspect	Picture / Format
Info	Info / Angle
Exit	Exit / Cancel / Clear
Netflix	Shift + Red / Netflix /
Home	Shift + Menu /
APPS	Shift + Green / APP /
Option	Setup / OPT /
Return	Back / Return
Up	Up
Down	Down

Original	Recharge
Right	Right
Left	Left
OK	OK
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Vol+	Vol+
Vol-	Vol-
Mute	Mute / Dimmer
CH+	CH+ / Page+
CH-	CH- / Page-
1	1
2	2
3	3
4	4
5	5





Original		Recharge		Original	Recharge
	6		6		
	7		7		
	8		8		
	9		9		
	0		0		
	Last View		Fav / Marker / PC		
	Hexa Boost		Sound / Title		
	<</ <<		<< / Tune-		
	Play		Play / Slow		
	>>/>>		>> / Tune+		
	Stop		Stop / Hold		
	Pause		Pause / Step / Freeze		
	Rec		Rec / Rec Mode		
	Off Timer		Sleep / Timer		
	My APP		Smart / List		
	e-Help		Audio / Lang I/II		

