

 



Original	Recharge
 Receiver Power	 Power
 Input Select-	 CH- / Page-
 Input Select+	 CH+ / Page+
 TV Control Input	 Shift + AV / Input / RDS
 TV Control Power	 Shift + Power
 BD	 2
 TV	 1
 DVR	 5
 TV Control CH+	 Shift + CH+ /
 CD	 3
 CD-R	 9
 TUNER	 6
 TV Control CH-	 Shift + CH- /
 VIDEO	 4
 AUX	 7
 TV Control Vol+	 Shift + Vol+
 iPod USB	 8

Original	Recharge
 Dimmer	 Shift + Mute / Dimmer
 Signal Sel	 Picture / Format
 TV Control Vol-	 Shift + Vol-
 Auto / Direct	 Red / Netflix / Search
 Stereo / ALC	 Green / APP / Repeat
 Standard	 Yellow / YouTube / Repeat
 Adv Surr	 Blue / Prime Video / Random
 Audio	 Audio / Lang I/II
 Master	 Vol+
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 Master Volume-	 Vol-
 Setup	 Setup / OPT /
 Return	 Back / Return

 




 












 





Original		Rechange		Original		Rechange	
	Mute		Mute / Dimmer				
	Bass-		I<< / Preset-				
	Bass+		>>I / Preset+				
	Tre-		<< / Tune-				
	Tre+		>> / Tune+				
	Display		Display / Media				
	S.Retriever		Sound / Title				
	EQ		Subtitle / EQ				
	CH Select		Shift + OK				
	Sleep		Sleep / Timer				
	SB CH		Zoom / Size				
	Phase		TV/Radio /				
	CH Level+		Shift + Up				
	Midnight		Text / Goto				
	Speakers		Eject / Surround				
	CH Level-		Shift + Down				





Original		Rechange		Original		Rechange	
	Power Source		Power		1		1
	Tuner		Shift + 6		2		2
	Menu		Menu / Home		3		3
	Master Volume		Vol+		Display		Display / Media
	Tune+		>> / Tune+		4		4
	Tune+		Up		5		5
	Preset-		I<< / Preset-		6		6
	Preset-		Left		7		7
	Enter		OK		8		8
	Preset+		>>I / Preset+		9		9
	Preset+		Right		0		0
	Tune-		<< / Tune-				
	Tune-		Down				
	Master Volume		Vol-				
	Search		Red / Netflix / Search				
	Band		Subtitle / EQ				
	Mute		Mute / Dimmer				





Original		Recharge		Original	Recharge
	iPod USB		8		
	Top Menu		D.Menu / Top		
	Master Volume		Vol+		
	Master Volume		Vol-		
	iPod CTRL		Setup / OPT /		
	Pause		Pause / Step / Freeze		
	Play		Play / Slow		
	I<<		I<< / Preset-		
	>>I		>>I / Preset+		
	<<		<< / Tune-		
	>>		>> / Tune+		





Original	Recharge
Receiver Power	Power
Input Select-	CH- / Page-
Input Select+	CH+ / Page+
TV Control Input	Shift + AV / Input / RDS
TV Control Power	Shift + Power
BD	2
TV	1
DVR	5
TV Control CH+	Shift + CH+ /
CD	3
CD-R	9
TUNER	6
TV Control CH-	Shift + CH- /
VIDEO	4
AUX	7
TV Control Vol+	Shift + Vol+
iPod USB	8

Original	Recharge
Dimmer	Shift + Mute / Dimmer
Signal Sel	Picture / Format
TV Control Vol-	Shift + Vol-
Auto / Direct	Red / Netflix / Search
Stereo / ALC	Green / APP / Repeat
Standard	Yellow / YouTube / Repeat
Adv Surr	Blue / Prime Video / Random
Audio	Audio / Lang I/II
Master	Vol+
Up	Up
Left	Left
Enter	OK
Right	Right
Down	Down
Master Volume-	Vol-
Setup	Setup / OPT /
Return	Back / Return



