 


 




















 





 





 








 


 







	Original	Recharge	Original	Recharge
	Standby			Tv/Radio
	Source			Info / Angle
	1			Up
	2			Left
	3			OK
	4			Right
	5			Down
	6			Exit / Cancel / Clear
	7			Menu / Home
	8			Mute / Dimmer
	9			Vol+
	FAV			Guide / EPG / -/--
	0			CH+ / Page+
	Recall			Vol-
	P.Mode			Display / Media
	S.Mode			CH- / Page-
	Sleep			Rec / Rec Mode





	Original	Recharge		Original	Recharge
	T-Shift	 D.Menu / Top		Green	 Green / APP / Repeat
	I/II/Audio	 Audio / Lang I/II		Yellow	 Yellow / YouTube / Repeat
	Size/Aspect	 Shift + Zoom /		Blue	 Blue / Prime Video / Random
	Text	 Text / Goto			
	Reveal	 Setup / OPT /			
	Hold	 Shift + Stop /			
	Subpage	 Eject / Surround			
	Play	 Play / Slow			
	Pause	 Pause / Step / Freeze			
	Stop	 Stop / Hold			
	Index/R.List	 Zoom / Size			
	Subtitle	 Subtitle / EQ			
	<<	 << / Tune-			
	>>	 >> / Tune+			
	I<<	 I<< / Preset-			
	>>I/Mix	 >>I / Preset+			
	Red	 Red / Netflix / Search			

