





















Original	Recharge
 Power	 Power
 Review	 Setup / OPT /
 Tv/VCR	 TV/Radio /
 Audio	 Audio / Lang I/II
 ---	 Smart / List
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 X	 Exit / Cancel / Clear
 0	 0
Timer	Sleep / Timer

Original	Recharge
 Start Debut +	 Green / APP / Repeat
 Stop Fin +	 Blue / Prime Video / Random
 Date+	 Vol+
 PR+	 CH+ / Page+
 Start Debut -	 Red / Netflix / Search
 Stop Fin -	 Yellow / YouTube / Repeat
 Date-	 Vol-
 PR-	 CH- / Page-
 Prog	 D.Menu / Top
 Timer/?	 Shift + Sleep / Timer
 I/II	 Display / Media
 30 Sec >>	 Back / Return
 <<	 << / Tune-
 Play	 Play / Slow
 >>	 >> / Tune+
 Rec	 Rec / Rec Mode
Stop	Stop / Hold





 








 



Original	Recharge
 Pause	 Pause / Step / Freeze
 Menu	 Menu / Home
 OK	 OK
 Up	 Up
 Left/ <</-	 Left
 Left/ <</-	  << / Preset-
 Right/ >> +	 >>  / Preset+
 Right/ >> +	 Right
 Down	 Down

Original	Recharge





Original	Recharge	Original	Recharge
 Power	 Power		
 TV/VCR	 AV / Input / RDS		
 Mute	 Mute / Dimmer		
 PR+	 CH+ / Page+		
 PR-	 CH- / Page-		
 Vol+	 Vol+		
 Vol-	 Vol-		

