



Original	Rechange
Power	Power
DVD	Shift + 2
Tuner Band	Shift + 6
Aux	Shift + 7
Open / Close	Eject / Surround
Title	Shift + Sound / Title
Menu	Menu / Home
TV / Video	AV / Input / RDS
TV Power	Shift + Power
Audio Mo/St	Audio / Lang I/II
Subtitle	Subtitle / EQ
TV Channel -	Shift + CH- /
TV Channel +	Shift + CH+ /
Display	Display / Media
Return	Back / Return
TV Volume -	Shift + Vol-
TV Volume +	Shift + Vol+

Original	Rechange
I<<	I<< / Preset-
Stop	Stop / Hold
Play / Pause	Play / Slow
Play / Pause	Pause / Step / Freeze
>>I	>>I / Preset+
<< / Tuning	<< / Tune-
>> / Tuning Up	>> / Tune+
Up	Up
Left	Left
Enter	OK
Right	Right
Down	Down
Volume -	Vol-
Volume +	Vol+
DSP/PLII Mode	CH+ / Page+
DSP/PLII Efect	CH- / Page-
Mute	Mute / Dimmer





Original	Rechange
Sleep	Sleep / Timer
1 / RDS Display	1
2	2
3 / TA	3
Sound Edit	Sound / Title
4 / PTY -	4
5 / PTY Search	5
6 / PTY +	6
SPK Mode	Smart / List
7	7
8	8
9	9
Pro Logic II	Shift + Audio / Lang I/II
Slow	Shift + Play /
0	0
Setup	Setup / OPT /
Test Tone	Shift + Text / Goto

Goto

Original	Rechange
Angle	Info / Angle
Zoom	Zoom / Size
DRC	D.Menu / Top
Clear	Exit / Cancel / Clear
Repeat	Green / APP / Repeat
Repeat A-B	Yellow / YouTube / Repeat
Program	TV/Radio /
Step	Shift + Pause / Step /
Go To	Text / Goto
Remain	Picture / Format

