



Original		Recharge		Original		Recharge	
	Power		Power		Up		Up
	AV Set		AV / Input / RDS		Left		Left
	Menu		Menu / Home		OK		OK
	Mute		Mute / Dimmer		Right		Right
	Red/Timer		Red / Netflix / Search		Back		Back / Return
	Green/Sub		Green / APP / Repeat		Down		Down
	Yellow/Audio		Yellow / YouTube / Repeat		Info		Info / Angle
	Blue/TXT		Blue / Prime Video / Random		Vol+		Vol+
	<<		<< / Tune-		Google		Shift + Red / Netflix /
	Play		Play / Slow		P+		CH+ / Page+
	Pause		Pause / Step / Freeze		Vol-		Vol-
	>>		>> / Tune+		DTV		Fav / Marker / PC
	Stop		Stop / Hold		P-		CH- / Page-
	YouTube		Shift + Yellow / YouTube /		1		1
	prime video		Shift + Blue / Prime		2		2
	Home		Shift + Menu /		3		3
	APPS		Shift + Green / APP / Repeat		4		4





Original		Recharge		Original		Recharge	
5	5	TAPE 5	5				
6	6	TUNER 6	6				
7	7	AUX - HDD 7	7				
8	8	USB 8	8				
9	9	BLUETOOTH 9	9				
EPG	EPG	GUIDE EPG -/-	Guide / EPG / -/-				
0	0	HDMI - BAT 0	0				
TV/RADIO	Tv/Radio	PROGRAM TV/RADIO	TV/Radio /				

