



Original		Rechange		Original		Rechange	
	Power		Power		Timer Rec		Sleep / Timer
	TV/Video		AV / Input / RDS		Slow		Shift + Play /
	Counter Reset		Exit / Cancel / Clear		Pause		Pause / Step / Freeze
	1		1		Play		Play / Slow
	2		2		<<		<< / Tune-
	3		3		>>		>> / Tune+
	Prog +		CH+ / Page+		Stop		Stop / Hold
	4		4		SP/LP		Sound / Title
	5		5		A.Select		Audio / Lang I/II
	6		6				
	Prog -		CH- / Page-				
	7		7				
	8		8				
	9		9				
	Display		Display / Media				
	0		0				
	Rec		Rec / Rec Mode				





Original	Recharge	Original	Recharge
Power	Power		
Source	AV / Input / RDS		
1	1		
2	2		
3	3		
PR+	CH+ / Page+		
4	4		
5	5		
6	6		
PR-	CH- / Page-		
7	7		
8	8		
9	9		
Vol+	Vol+		
0	0		
Vol-	Vol-		

Original	Recharge

