



Original	Rechange
 Mute	 Mute / Dimmer
 Power	 Power
 Media	 Display / Media
 AV	 AV / Input / RDS
 Freeze	 Shift + Pause / Step /
 Exit	 Exit / Cancel / Clear
 Guide	 Guide / EPG / -/--
 Text	 Text / Goto
 Subt.	 Subtitle / EQ
 Format	 Picture / Format
 Mode	 Setup / OPT /
 Up	 Up
 Lang.	 Audio / Lang I/II
 Left	 Left
 OK	 OK
 Right	 Right
 Menu / Back	 Menu / Home

Original	Rechange
 Down	 Down
 Info	 Info / Angle
 PR-	 CH- / Page-
 PR+	 CH+ / Page+
 Vol-	 Vol-
 Vol+	 Vol+
 Red / List / Page+	 Red / Netflix / Search
 Red / List / Page+	 Shift + CH+ /
 Red / List / Page+	 Smart / List
 Green / Page-	 Green / APP / Repeat
 Green / Page-	 Shift + CH- /
 Yellow / Sound	 Sound / Title
 Yellow / Sound	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 1	 1
 2	 2
 3	 3





	Original	Rechange	Original	Rechange
	4	VIDEO 4		
	5	TAPE 5		
	6	TUNER 6		
	7	AUX - HDD 7		
	8	USB 8		
	9	BLUETOOTH 9		
	Fav.	PC FAV MARKER		Fav / Marker / PC
	0	HDMI - BAT 0		
	P<P	RETURN BACK		Back / Return
	<<	TUNE- <<		<< / Tune-
	>>	TUNE+ >>		>> / Tune+
	Timers	TIMER SLEEP		Sleep / Timer
	Lib.	TOP MENU D.MENU		D.Menu / Top
	Play	SLOW Play		Play / Slow
	Stop	HOLD Stop		Stop / Hold
	Pause	STEP - FREEZE Pause		Pause / Step / Freeze
	Rec	REC MODE Rec		Rec / Rec Mode

