



Original	Rechange
	Mute / Dimmer
	Power
	Display / Media
	AV / Input / RDS
	Shift + Pause / Step /
	Exit / Cancel / Clear
	Guide / EPG / -/-
	Text / Goto
	Subtitle / EQ
	Picture / Format
	Setup / OPT /
	Up
	Audio / Lang I/II
	Left
	OK
	Right
	Menu / Home

Original	Rechange
	Down
	Info / Angle
	CH- / Page-
	CH+ / Page+
	Vol-
	Vol+
	Red / Netflix / Search
	Shift + CH+ /
	Smart / List
	Green / APP / Repeat
	Shift + CH- /
	Sound / Title
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	1
	2
	3





Original		Rechange	
JKL 4	4	VIDEO 4	4
MNO 5	5	TAPE 5	5
PQR 6	6	TUNER 6	6
STU 7	7	AUX - HDD 7	7
VWX 8	8	USB 8	8
YZ 9	9	BLUETOOTH 9	9
FAV.	Fav.	PC FAV MARKER	Fav / Marker / PC
0	0	HDMI - BAT 0	0
P<P	P<P	RETURN BACK	Back / Return
<<	<<	TUNE-	<< / Tune-
>>	>>	TUNE+	>> / Tune+
TIMERS	Timers	TIMER SLEEP	Sleep / Timer
LIB.	Lib.	TOP MENU D.MENU	D.Menu / Top
▶	Play	SLOW	Play / Slow
◻	Stop	HOLD	Stop / Hold
⏸	Pause	STEP - FREEZE II	Pause / Step / Freeze
●	Rec	REC MODE	Rec / Rec Mode

Original		Rechange	

