 













 















 



 



 



 





























Original	Rechange	Original	Rechange
 Power	 Power	 Mute	 Mute / Dimmer
 TV/Video	 AV / Input / RDS	 exit	 Exit / Cancel / Clear
 PC	 Fav / Marker / PC	 1	 1
 Display	 Display / Media	 2	 2
 Still	 Pause / Step / Freeze	 3	 3
 P.STD	 Picture / Format	 4	 4
 S.STD	 Sound / Title	 5	 5
 Left / Vol-	 Left	 6	 6
 Left / Vol-	 Vol-	 7	 7
 Up / P+	 CH+ / Page+	 8	 8
 Up / P+	 Up	 9	 9
 Right / Vol+	 Right	 -/--	 Guide / EPG / -/--
 Right / Vol+	 Vol+	 0	 0
 Menu / Index	 OK	 Pre-CH	 Back / Return
 Menu / Index	 Menu / Home	 TTX/Mix	 Text / Goto
 Down / P-	 Down	 Auto	 Setup / OPT /
 Down / P-	 CH- / Page-	 Sleep / Hold	 Sleep / Timer



