

 

 

 



 

 

 

 







| Original | Rechange |
|---|---|
|  On/Off |  Power |
|  Sleep |  Sleep / Timer |
|  iPod |  Fav / Marker / PC |
|  FM |  6 |
|  AUX |  7 |
|  < Preset |  Left |
|  Preset > |  Right |
|  << Tuning |  << / Tune- |
|  Tuning >> |  >> / Tune+ |
|  Memory FM |  Smart / List |
|  Clock/Set |  D.Menu / Top |
|  Function |  Setup / OPT / |
|  Menu |  Menu / Home |
|  ▲ |  CH+ / Page+ |
|  I<< |  I<< / Preset- |
|  Ok |  OK |
|  >>I |  >>I / Preset+ |

| Original | Rechange |
|---|---|
|  Display |  Display / Media |
|  Play |  Play / Slow |
|  Pause |  Pause / Step / Freeze |
|  ▼ |  CH- / Page- |
|  DSP |  AV / Input / RDS |
|  Random |  Blue / Prime Video / Random |
|  Repeat |  Green / APP / Repeat |
|  Mute |  Mute / Dimmer |
|  Vol- |  Vol- |
|  Vol+ |  Vol+ |

