



 

 
 
 

 

 

 



 



 



















 











 

















Original		Rechange		Original		Rechange	
	Power		Power		Down		Down
	Mute		Mute / Dimmer		Return		Back / Return
	Play		Play / Slow		Vol+		Vol+
	Pause		Pause / Step / Freeze		[=]/Start		Smart / List
	Stop/Eject		Stop / Hold		Vol-		Vol-
	Rec		Rec / Rec Mode		CMSS		Display / Media
	<<		<< / Tune-		1		1
	>>		>> / Tune+		2		2
	I<		I<< / Preset-		3		3
	>I		>>I / Preset+		4		4
	EAX		Setup / OPT /		5		5
	*/Options		Menu / Home		6		6
	Up		Up		7		7
	[ ]/Display		Info / Angle		8		8
	I>		Left		9		9
	OK/Enter/Select		OK		0		0
	X/Cancel		Exit / Cancel / Clear		Shift + Pause / Step / Freeze		Shift + Pause / Step / Freeze

