



Original	Rechange
Standby	Power
Mute	Mute / Dimmer
EPG	Guide / EPG / /--
Info	Info / Angle
TTX	Text / Goto
Audio	Audio / Lang I/II
Subtitle	Subtitle / EQ
Menu	Menu / Home
Up / CH+	CH+ / Page+
Up / CH+	Up
Exit	Exit / Cancel / Clear
Left / Vol-	Vol-
Left / Vol-	Left
OK	OK
Right / Vol+	Vol+
Right / Vol+	Right
Favourite	Fav / Marker / PC

Original	Rechange
Down / CH-	CH- / Page-
Down / CH-	Down
TV/Radio	TV/Radio /
1	1
2	2
3	3
Recall	Back / Return
4	4
5	5
6	6
Goto	Shift + Text /
7	7
8	8
9	9
0	0
Rev	<< / Tune-
Fwd	>> / Tune+





Original	Recharge
PREV	<< / Preset-
NEXT	>> / Preset+
PLAY	Play / Slow
PAUSE	Pause / Step / Freeze
STOP	Stop / Hold
REPEAT	+ Shift + Green / APP /
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random

Original	Recharge

