



 







 











 





 



 




 


































| Original | | Rechange | | Original | | Rechange | |
|---|--------|---|-------------------|---|-------|---|-----------------------|
|  | Power |  | Power |  | Vol- |  | Vol- |
|  | Source |  | AV / Input / RDS |  | Home |  | Menu / Home |
|  | 1 |  | 1 |  | P- |  | CH- / Page- |
|  | 2 |  | 2 |  | G |  | Guide / EPG / -/-- |
|  | 3 |  | 3 |  | Up |  | Up |
|  | 4 |  | 4 |  | i |  | Info / Angle |
|  | 5 |  | 5 |  | Left |  | Left |
|  | 6 |  | 6 |  | OK |  | OK |
|  | 7 |  | 7 |  | Right |  | Right |
|  | 8 |  | 8 |  | Back |  | Back / Return |
|  | 9 |  | 9 |  | Down |  | Down |
|  | Lang |  | Audio / Lang I/II |  | Exit |  | Exit / Cancel / Clear |
|  | 0 |  | 0 |  | << |  | << / Tune- |
|  | TXT |  | Text / Goto |  | Pause |  | Pause / Step / Freeze |
|  | Vol+ |  | Vol+ |  | >> |  | >> / Tune+ |
|  | Mute |  | Mute / Dimmer |  | Rec |  | Rec / Rec Mode |
|  | P+ |  | CH+ / Page+ |  | Play |  | Play / Slow |





| Original | Recharge | Original | Recharge |
|--|---|----------|----------|
|  Stop |  Stop / Hold | | |
|  Red |  Red / Netflix / Search | | |
|  Green |  Green / APP / Repeat | | |
|  Yellow |  Yellow / YouTube / Repeat | | |
|  Blue |  Blue / Prime Video / Random | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

