



Original		Rechange		Original		Rechange	
	Sleep		Sleep / Timer		Space		Fav / Marker / PC
	Disc Skip		D.Menu / Top		Random		Blue / Prime Video / Random
	Input		AV / Input / RDS		7		7
	Power		Power		8		8
	Source Direct		Smart / List		9		9
	EQ.		Subtitle / EQ		Check		Red / Netflix / Search
	N.B.		Text / Goto		P.Mode		Picture / Format
	EX.Bass		Sound / Title		0		0
	SRS 3D		Audio / Lang I/II		+10/PTY Search		Guide / EPG / -/-
	1		1		Clear		Exit / Cancel / Clear
	2		2		Edit		Zoom / Size
	3		3		Band		TV/Radio /
	Time		Shift + Sleep / Timer		Auto M./Enter		OK
	Repeat		Green / APP / Repeat		RDS Display		Display / Media
	4		4		TA/News/Info.		Info / Angle
	5		5		PTY		Back / Return
	6		6		A-B		Yellow / YouTube / Repeat





Original	Recharge	Original	Recharge
I << P.Call	I << / Preset-		
P.Call >> I	>> I / Preset+		
<< / Tuning	<< / Tune-		
Tuning Up/>>	>> / Tune+		
Rec/ARM	Rec / Rec Mode		
< Tape	Left		
Tape >	Right		
Stop	Stop / Hold		
Play	Play / Slow		
Pause	Pause / Step / Freeze		
O.T.E. MD→Tape	Up		
O.T.E. CD←Tape	Down		
Mute	Mute / Dimmer		
Volume-	Vol-		
Volume+	Vol+		

