




















 










Original	Rechange
 Power	 Power
 Mute	 Mute / Dimmer
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Rec	 Rec / Rec Mode
 <<	 << / Tune-
 >>	 >> / Tune+
 Lang	 Audio / Lang I/II
 [=].	 Subtitle / EQ
 *1	 Picture / Format
 Text	 Text / Goto
 Google Play	 Shift + Green / APP / REPEAT
 Source	 AV / Input / RDS
 Menu	 Menu / Home
 Up	 Up
 i	 Info / Angle

Original	Rechange
 Left	 Left
 OK	 OK
 Right	 Right
 EXIT	 Exit / Cancel / Clear
 Down	 Down
 ←	 Back / Return
 V+	 Vol+
 P+	 CH+ / Page+
 V-	 Vol-
 P-	 CH- / Page-
 1 /@	 1
 2 ABC	 2
 3 DEF	 3
 4 GHI	 4
 5 JKL	 5
 6 MNO	 6
 7 PQRS	 7





Original		Recharge		Original		Recharge	
	8		8				
	9		9				
	[G]		Guide / EPG / -/--				
	0		0				
	Red		Red / Netflix / Search				
	Green		Green / APP / Repeat				
	Yellow		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				
	Home		Shift + Menu /				
	Netflix		Shift + Red / Netflix /				
	YouTube		Shift + Yellow / YouTube /				
	prime video		Shift + Blue / Prime				

