










 







 




 











 







 









 




 

 






Original	Recharge	Original	Recharge
 Power	 Power	 Left	 Left
 Mute	 Mute / Dimmer	 OK	 OK
 Play	 Play / Slow	 Right	 Right
 Pause	 Pause / Step / Freeze	 EXIT	 Exit / Cancel / Clear
 Stop	 Stop / Hold	 Down	 Down
 Rec	 Rec / Rec Mode	 ←	 Back / Return
 <<	 << / Tune-	 V+	 Vol+
 >>	 >> / Tune+	 P+	 CH+ / Page+
 Lang	 Audio / Lang I/II	 V-	 Vol-
 [=]..	 Subtitle / EQ	 P-	 CH- / Page-
 *1	 Picture / Format	 1	 1
 Text	 Text / Goto	 2	 2
 Google Play	 Shift + Green / APP / REPEAT	 3	 3
 Source	 AV / Input / RDS	 4	 4
 Menu	 Menu / Home	 5	 5
 Up	 Up	 6	 6
 i	 Info / Angle	 7	 7





Original	Recharge
 8	 8
 9	 9
 [G]	 Guide / EPG / -/--
 0	 0
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Home	 Shift + Menu /
 Netflix	 Shift + Red / Netflix /
 YouTube	 Shift + Yellow / YouTube /
 prime video	 Shift + Blue / Prime

Original	Recharge

