























































 



 














| Original | | Rechange | | Original | | Rechange | |
|---|-------|---|---------------|---|---------|---|--------------------------|
|  | Power |  | Power |  | (≡?) |  | Play / Slow |
|  | Mute |  | Mute / Dimmer |  | Freeze |  | Pause / Step / Freeze |
|  | 1 |  | 1 |  | Aspect |  | Shift + Picture / Format |
|  | 2 |  | 2 |  | Audio |  | Audio / Lang I/II |
|  | 3 |  | 3 |  | Sleep |  | Sleep / Timer |
|  | 4 |  | 4 |  | Picture |  | Picture / Format |
|  | 5 |  | 5 |  | Source |  | AV / Input / RDS |
|  | 6 |  | 6 |  | (≡x) |  | Rec / Rec Mode |
|  | 7 |  | 7 |  | Hold |  | Stop / Hold |
|  | 8 |  | 8 |  | P+ |  | CH+ / Page+ |
|  | 9 |  | 9 |  | Up |  | Up |
|  | i |  | Info / Angle |  | Left |  | Left |
|  | 0 |  | 0 |  | Vol- |  | Vol- |
|  | R |  | Back / Return |  | Menu |  | Menu / Home |
|  | (≡i) |  | >> / Tune+ |  | Right |  | Right |
|  | (♦) |  | I<< / Preset- |  | Vol+ |  | Vol+ |
|  | (≡o) |  | << / Tune- |  | P- |  | CH- / Page- |





Original

Rechange

| | | | |
|---|--------------|---|-----------------------------|
|  | Down |  | Down |
|  | (≡)(-) |  | Text / Goto |
|  | Red |  | Red / Netflix / Search |
|  | Green |  | Green / APP / Repeat |
|  | Yellow |  | Yellow / YouTube / Repeat |
|  | Blue |  | Blue / Prime Video / Random |
|  | PIP Source |  | Shift + 3 |
|  | PIP Main |  | Shift + 2 |
|  | PIP Swap |  | Shift + 5 |
|  | PIP Position |  | Shift + 4 |
|  | PIP Size |  | Shift + 6 |
|  | PIP |  | Shift + 1 |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

Original

Rechange

| | |
|--|--|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

