































 



Original	Recharge	Original	Recharge
PWR On/Off	 Power	TV/SAT	 AV / Input / RDS
Mute	 Mute / Dimmer	Menu	 Menu / Home
H/V Play	 Play / Slow	Menu Up	 Up
Dec/Pause	 Pause / Step / Freeze	Info	 Info / Angle
East	 Rec / Rec Mode	Menu Left	 Left
Lang./Rewind	 << / Tune-	OK Enter	 OK
LNB F.Forward	 >> / Tune+	Menu Right	 Right
West	 << / Preset-	Exit	 Exit / Cancel / Clear
Dev	 >> / Preset+	Menu Down	 Down
Lang./Rewind	 Sound / Title	Back	 Back / Return
Audio	 Audio / Lang I/II	Volume+	 Vol+
Subt.List	 Subtitle / EQ	SAT Sky	 Smart / List
Zoom	 Zoom / Size	CH/Page+	 CH+ / Page+
Sleep Timer	 Sleep / Timer	Volume-	 Vol-
TV	 TV/Radio /	Display	 Display / Media
Opt?	 Setup / OPT /	CH/Page-	 CH- / Page-
Text	 Text / Goto	1. ?	 1



Original	Recharge	Original	Recharge
2abc	 2		 Shift + CH+ /
3def	 3		 Shift + CH- /
4ghi	 4	TV	 Shift + 1
5jkl	 5	Video	 Shift + 4
6mno	 6	Epg	 Shift + Guide / EPG / -/--
7pqrm	 7	App	 Shift + Green / APP /
8tuv	 8		
9wxyz	 9		
Guide Pilote	 Guide / EPG / -/--		
0/10	 0		
FAV Pref.	 Fav / Marker / PC		
Red	 Red / Netflix / Search		
Green	 Green / APP / Repeat		
Yellow	 Yellow / YouTube / Repeat		
Blue	 Blue / Prime Video / Random		
	 Shift + Mute / Dimmer		
Freeze	 Shift + Pause / Step / Freeze		

