



| Original | Rechange |
|------------|---------------------------|
| Open/Close | Eject / Surround |
| Mute | Mute / Dimmer |
| DVD | Shift + 2 |
| Tuner | Shift + 6 |
| Scart | Yellow / YouTube / Repeat |
| AUX | Shift + 7 |
| 1 | 1 |
| 2 | 2 |
| 3 | 3 |
| 4 | 4 |
| 5 | 5 |
| 6 | 6 |
| 7 | 7 |
| 8 | 8 |
| 9 | 9 |
| 0 | 0 |
| +10 | Shift + Guide / EPG / -/- |

| Original | Rechange |
|------------|-----------------------|
| Setup | Setup / OPT / |
| FM Mode | Guide / EPG / -/- |
| Pre/Tun | Fav / Marker / PC |
| Memo | Rec / Rec Mode |
| Auto | D.Menu / Top |
| Up | Up |
| Down | Down |
| Left | Left |
| Right | Right |
| Enter | OK |
| Pause/Step | Pause / Step / Freeze |
| Play | Play / Slow |
| Stop | Stop / Hold |
| Vol- | Vol- |
| Vol+ | Vol+ |
| CH- | CH- / Page- |
| CH+ | CH+ / Page+ |





| Original | Recharge |
|----------|-----------------------------|
| I<< | I<< / Preset- |
| >>I | >>I / Preset+ |
| << | << / Tune- |
| >> | >> / Tune+ |
| Zoom | Zoom / Size |
| Prog | TV/Radio / |
| Slow | Shift + Play / |
| A-B | Shift + YouTube / YouTube / |
| Goto | Text / Goto |
| Title | Sound / Title |
| Menu | Menu / Home |
| Display | Display / Media |
| Subtitle | Subtitle / EQ |
| N/P | Shift + Setup / OPT / Tools |
| Language | Audio / Lang I/II |
| Angle | Info / Angle |
| Resume | Shift + Display / Media |

| Original | Recharge |
|----------|-----------------------|
| Repeat | Green / APP / Repeat |
| R/L | Shift + Subtitle / EQ |
| Video | Shift + 4 |
| Return | Back / Return |

