



Original	Rechange
Open/Close	Eject / Surround
Mute	Mute / Dimmer
DVD	Shift + 2
Tuner	Shift + 6
Scart	Yellow / YouTube / Repeat
AUX	Shift + 7
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
+10	Shift + Guide / EPG / -/-

Original	Rechange
Setup	Setup / OPT /
FM Mode	Guide / EPG / -/-
Pre/Tun	Fav / Marker / PC
Memo	Rec / Rec Mode
Auto	D.Menu / Top
Up	Up
Down	Down
Left	Left
Right	Right
Enter	OK
Pause/Step	Pause / Step / Freeze
Play	Play / Slow
Stop	Stop / Hold
Vol-	Vol-
Vol+	Vol+
CH-	CH- / Page-
CH+	CH+ / Page+





Original	Recharge
I<<	I<< / Preset-
>>I	>>I / Preset+
<<	<< / Tune-
>>	>> / Tune+
Zoom	Zoom / Size
Prog	TV/Radio /
Slow	Shift + Play /
A-B	Shift + YouTube / YouTube /
Goto	Text / Goto
Title	Sound / Title
Menu	Menu / Home
Display	Display / Media
Subtitle	Subtitle / EQ
N/P	Shift + Setup / OPT / Tools
Language	Audio / Lang I/II
Angle	Info / Angle
Resume	Shift + Display / Media

Original	Recharge
Repeat	Green / APP / Repeat
R/L	Shift + Subtitle / EQ
Video	Shift + 4
Return	Back / Return

