













 
 












 





 












 
 


Original	Rechange
 Power	 Power
 Sleep	 Sleep / Timer
 Program	 TV/Radio /
 Cancel	 Exit / Cancel / Clear
 1	 1
 2	 2
 3	 3
 Disc	 Fav / Marker / PC
 4	 4
 5	 5
 6	 6
 >=10 / -/-	 Guide / EPG / -/-
 7	 7
 8	 8
 9	 9
 0	 0
 Test	 Text / Goto

Original	Rechange
 Pro Logic	 Audio / Lang I/II
 Super SRND	 Eject / Surround
 Super 3D AI EQ	 Menu / Home
 Up	 Up
 Left	 Left
 EQ	 Subtitle / EQ
 EQ	 OK
 Right	 Right
 CH Select	 Smart / List
 Down	 Down
 AV Effect	 AV / Input / RDS
 Super Sound EQ	 Sound / Title
 Digital S. Woofer	 Setup / OPT /
 VCR / AUX / 6CH Input	 Shift + 7
 VCR / AUX / 6CH Input	 Shift + 4
 VCR / AUX / 6CH Input	 Red / Netflix / Search
 TAPE / Deck 1/2	 Shift + 5





Original	Recharge
 TAPE / Deck 1/2	 Green / APP / Repeat
 CD	 Shift + 3
 CD	 Display / Media
 CD	 Yellow / YouTube / Repeat
 TUNER / Band	 Shift + 6
 TUNER / Band	 Blue / Prime Video / Random
 Pause / Rev. Play	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Play	 Play / Slow
 Muting	 Mute / Dimmer
 I<< / << / Album-	 I<< / Preset-
 I<< / << / Album-	 << / Tune-
 >> / >> / Album+	 >> / Tune+
 >> / >> / Album+	 >> / Preset+
 Volume-	 Vol-
 Volume+	 Vol+

Original	Recharge

