


























 



 
 
 

 





 




Original	Rechange	Original	Rechange
 Power	 Power	 Clock	 D.Menu / Top
 Open / Close	 Play / Slow	 Play / Pause /	 TV/Radio /
 Vol+	 Pause / Step / Freeze	 Timer	 Setup / OPT /
 Function	 Rec / Rec Mode	 RDS / Set	 Text / Goto
 Preset/Folder+	 << / Tune-	 USB Rec	 AV / Input / RDS
 Vol-	 Stop / Hold	 PTY	 Menu / Home
 Mute	 Mute / Dimmer		
 Preset/Folder-	 >> / Tune+		
 Program /	 I<< / Preset-		
 Sound Effect	 >>I / Preset+		
 Info	 Sound / Title		
 Sleep	 Audio / Lang I/II		
 Repeat (Menu) /	 Eject / Surround		
 Delete	 Subtitle / EQ		
 I<< / Tuning- / Left	 Picture / Format		
 Stop / Enter	 Zoom / Size		
 >>I / Tuning+ / Right	 Sleep / Timer		

