

 









 


























































Original	Rechange	Original	Rechange
 Power	 Power	 Up	 Up
 Open/Close	 Eject / Surround	 Left	 Left
 Dimmer	 Shift + Mute / Dimmer	 Enter	 OK
 Display	 Display / Media	 Right	 Right
 Sleep	 Sleep / Timer	 Menu	 Menu / Home
 CD	 Shift + 3	 Down	 Down
 Tuner	 Shift + 6	 Return	 Back / Return
 Line	 Subtitle / EQ	 Vol+	 Vol+
 Digital	 D.Menu / Top	 Tone Ball	 Smart / List
 USB	 Shift + 8	 Vol-	 Vol-
 Pause	 Pause / Step / Freeze	 Muting	 Mute / Dimmer
 I<<</> Preset	 I<< / Preset-	 Memory	 TV/Radio /
 Play	 Play / Slow	 Random	 Blue / Prime Video / Random
 Preset >/>>I	 >>I / Preset+	 Repeat	 Green / APP / Repeat
 <<</> Tun	 << / Tune-	 1	 1
 Stop	 Stop / Hold	 2	 2
 Tun >/>>	 >> / Tune+	 3	 3



