



Original		Rechange		Original		Rechange	
	Power		Power		Page Down		Shift + CH- /
	Mute		Mute / Dimmer		Fav		Fav / Marker / PC
	1		1		Info		Info / Angle
	2		2		Up / CH+		CH+ / Page+
	3		3		Up / CH+		Up
	4		4		Left / Vol-		Vol-
	5		5		Left / Vol-		Left
	6		6		OK		OK
	7		7		Right / Vol+		Vol+
	8		8		Right / Vol+		Right
	9		9		Menu		Menu / Home
	Timer		Sleep / Timer		Down / CH-		Down
	0		0		Down / CH-		CH- / Page-
	Game		Smart / List		Exit		Exit / Cancel / Clear
	Page Up		Shift + CH+ /		Red / Scan		Red / Netflix / Search
	EPG		Guide / EPG / -/--		Green / Zoom		Zoom / Size
	Recall		Back / Return		Green / Zoom		Green / APP / Repeat





Original

Recharge

	Yellow / Pause		Shift + Pause / Step /
	Yellow / Pause		Yellow / YouTube / Repeat
	Blue / TV/Radio		TV/Radio /
	Blue / TV/Radio		Blue / Prime Video / Random
	Audio		Audio / Lang I/II
	Subtl		Subtitle / EQ
	TXT		Text / Goto
	<<		<< / Tune-
	>>		>> / Tune+
	Play/Pause		Pause / Step / Freeze
	Play/Pause		Play / Slow
	Rec		Rec / Rec Mode
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Slow		Shift + Play /
	Stop		Stop / Hold

Original

Recharge

