




 







Original		Recharge		Original		Recharge	
	Power		Power		Return		Back / Return
	Program		Shift + TV/Radio / Program		Up		Up
	Subtitle/Copy		Subtitle / EQ		Left		Left
	Open/Close		Eject / Surround		Enter		OK
	Display		Display / Media		Right		Right
	Step		Shift + Pause / Step /		Angle		Shift + Info / Angle
	↔/A-B		Shift + Yellow / YouTube /		Down		Down
	Repeat		Shift + Green / APP /		USB		Shift + 8
	V-Mode		Picture / Format		Menu		Menu / Home
	N/P		Exit / Cancel / Clear		Play		Play / Slow
	PBC		Sound / Title		Pause		Pause / Step / Freeze
	Zoom		Zoom / Size		Stop/PVR		Stop / Hold
	Text/Title		Text / Goto		Vol+		Vol+
	DVD/DVB		Smart / List		EPG		Guide / EPG / -/-
	Audio		Audio / Lang I/II		Info		Info / Angle
	Tv/Radio		TV/Radio /		Mute		Mute / Dimmer
	Setup		Setup / OPT /		Vol-		Vol-





Original	Recharge
1	TV 1
2	DVD 2
3	CD - STB 3
4	VIDEO 4
5	TAPE 5
6	TUNER 6
7	AUX - HDD 7
8	USB 8
9	BLUETOOTH 9
10	HDMI - SAT 0
10+	PC FAV MARKER Fav / Marker / PC
GOTO	SHIFT + GOTO TEXT Shift + Text /
REV	TUNE- << / Tune-
FWD	TUNE+ >> / Tune+
PREV	PRESET- << / Preset-
NEXT	PRESET+ >> / Preset+
Red	NETFLIX SEARCH Red / Netflix / Search

Original	Recharge
Green	APP REPEAT Green / APP / Repeat
Yellow	YouTube REPEAT A-B Yellow / YouTube / Repeat
Blue/FAV	Prime Video RANDOM Blue / Prime Video / Random

