 







 





























Original	Rechange
 Open/Close	 Eject / Surround
 Power	 Power
 VCR	 Shift + 4
 DVD	 Shift + 2
 Input	 AV / Input / RDS
 1/Tracking-	 1
 2	 2
 3/Tracking+	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 System	 Smart / List
 Clear	 Exit / Cancel / Clear

Original	Rechange
 Setup	 Setup / OPT /
 Display	 Display / Media
 Title/PBC	 Sound / Title
 Menu	 Menu / Home
 Up	 Up
 PR+	 CH+ / Page+
 PR-	 CH- / Page-
 Down	 Down
 Left	 Left
 Right	 Right
 OK/Enter	 OK
 Subtitle	 Subtitle / EQ
 Audio	 Audio / Lang I/II
 Search	 Red / Netflix / Search
 Zoom	 Zoom / Size
 <<	 << / Tune-
 Pause	 Pause / Step / Freeze





Original		Rechange		Original		Rechange	
	Play		Play / Slow				
	>>		>> / Tune+				
	I<<		I<< / Preset-				
	Stop		Stop / Hold				
	>>I		>>I / Preset+				
	Rec		Rec / Rec Mode				
	Speed		Picture / Format				
	Repeat		Green / APP / Repeat				
	A-B		Yellow / YouTube / Repeat				
	Tv/VCR		TV/Radio /				
	3D		Shift + 3				
	Mark		Fav / Marker / PC				
	Angle		Info / Angle				
	CM-Skip		Guide / EPG / -/-				
	Replay		Text / Goto				
	Last CH		Back / Return				
	Program		Shift + TV/Radio / Program				

