













 

 
 












 

 





Original	Rechange
Open/Close	Eject / Surround
Power	Power
VCR	Shift + 4
DVD	Shift + 2
Input	AV / Input / RDS
1/Tracking-	1
2	2
3/Tracking+	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
System	Smart / List
Clear	Exit / Cancel / Clear

Original	Rechange
Setup	Setup / OPT /
Display	Display / Media
Title/PBC	Sound / Title
Menu	Menu / Home
Up	Up
PR+	CH+ / Page+
PR-	CH- / Page-
Down	Down
Left	Left
Right	Right
OK/Enter	OK
Subtitle	Subtitle / EQ
Audio	Audio / Lang I/II
Search	Red / Netflix / Search
Zoom	Zoom / Size
<<	<< / Tune-
Pause	Pause / Step / Freeze





	Original	Rechange	Original	Rechange
		Play		Play / Slow
		>>		>> / Tune+
		I<<		I<< / Preset-
		Stop		Stop / Hold
		>>I		>>I / Preset+
		Rec		Rec / Rec Mode
		Speed		Picture / Format
		Repeat		Green / APP / Repeat
		A-B		Yellow / YouTube / Repeat
		Tv/VCR		TV/Radio /
		3D		Shift + 3
		Mark		Fav / Marker / PC
		Angle		Info / Angle
		CM-Skip		Guide / EPG / -/-
		Replay		Text / Goto
		Last CH		Back / Return
		Program		Shift + TV/Radio / Program

