



	Original	Rechange
	Mute	 Mute / Dimmer
	EPG	 Guide / EPG / -/--
	Info	 Info / Angle
	DVB/AV	 AV / Input / RDS
	Pause	 Pause / Step / Freeze
	1	 1
	2	 2
	3	 3
	Fav	 Fav / Marker / PC
	4	 4
	5	 5
	6	 6
	TV/Radio	 TV/Radio /
	7	 7
	8	 8
	9	 9
	Recall	 Back / Return

	Original	Rechange
	Up / CH+	 CH+ / Page+
	Up / CH+	 Up
	0	 0
	Audio	 Audio / Lang I/II
	Left / Vol-	 Vol-
	Left / Vol-	 Left
	OK	 OK
	Right / Vol+	 Vol+
	Right / Vol+	 Right
	TTX	 Text / Goto
	Menu	 Menu / Home
	Down / CH-	 CH- / Page-
	Down / CH-	 Down
	Exit	 Exit / Cancel / Clear
	Subtitle	 Subtitle / EQ
	Red / Function	 Red / Netflix / Search
	Red / Function	 Smart / List



